

Starter Motor Not Rotating

- Engine stop switch "OFF"
- Fuse failed
- Battery leads do not make good electrical contact with battery terminals
- Battery discharged

Engine Cranks, But Won't Start

- No fuel in tank
- Fuel filter clogged
- Fuel tap turned off
- Water in fuel
- Air filter clogged or inlet blocked
- Engine flooded
- Fuel tank vent clogged or hose kinked
- Spark plug wire not on spark plug
- Valve clearance incorrect
- Spark plug dirty

Engine Stops

- No fuel in tank
- Water in fuel
- Fuel filter clogged
- Fuel tap turned off
- Choke left on too long
- Air filter clogged or inlet blocked
- Fuel tank vent clogged

- Engine overheated
 - Too much idling or low speed running (not enough air flow)
 - Overloaded
 - Wrong spark plug
 - Coolant level too low
 - Coolant deteriorated
 - Engine oil low

No Power

- Engine overheated
 - Too much idling or low speed running (not enough air flow)
 - Overloaded
 - Wrong spark plug
 - Coolant level too low
 - Coolant deteriorated
 - Engine oil low
- Compression leakage
 - Valve clearance insufficient
- Fuel filter clogged
- Air filter clogged or inlet blocked
- Spark plug dirty or worn
- Choke left on
- Engine oil incorrect
- Water in fuel
- Drive belt slipping
 - Water in belt drive torque converter housing